

31



32



33



21



22



23



24



PR



4131



 relay 1

 relay 2

UNIVERSAL
TRANSMITTER



41



42



43



44